



(x2)

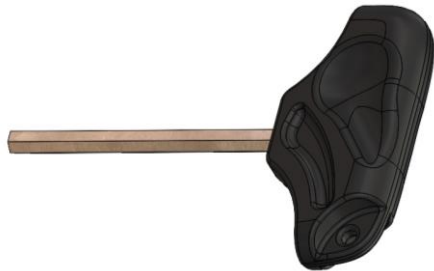

(x4)

M8x50 (x2) for front  
M8x60 (x2) for middle

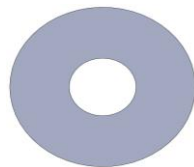

M8 (x4)



# FORD CONNECT 2003-2014 SKYPORT ROOF RAIL




# instructions



**Cıvataları  
sıkmadan önce  
silikon sıkın.**

**Put the cilicon  
before tighten  
up to the  
screws.**

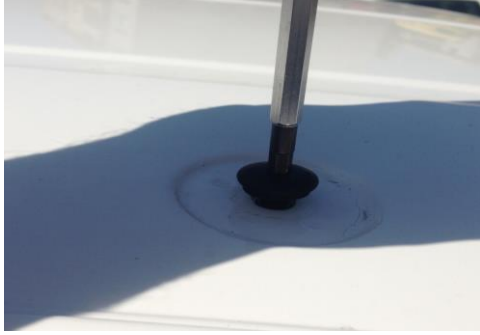

**FRONT**

**REAR**

