


(x4)



VW CADDY MAXI
2010 →
SKYPORT ROOF RAIL




(x8)

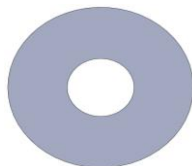




M8 (x8)



M8x50 (x2) **for front**
M8x60 (x4) **for middle**
M8x40 (x2) **for rear**

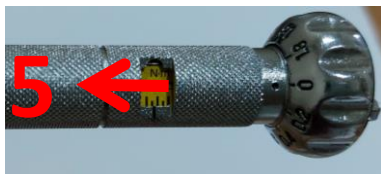

instructions

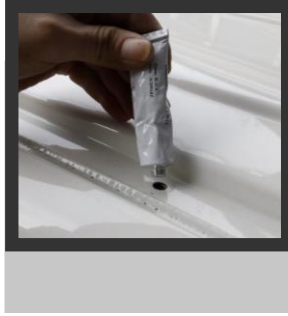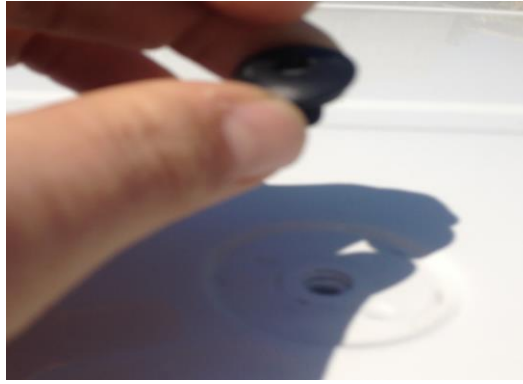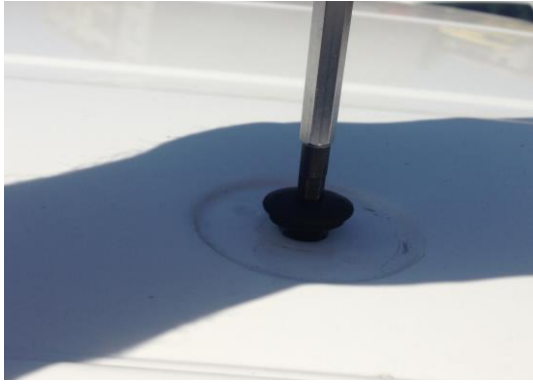

**Cıvataları
sıkmadan önce
silikon sıkın.**

**Put the cilicon
before tighten
up to the
screws.**

