



(x2)

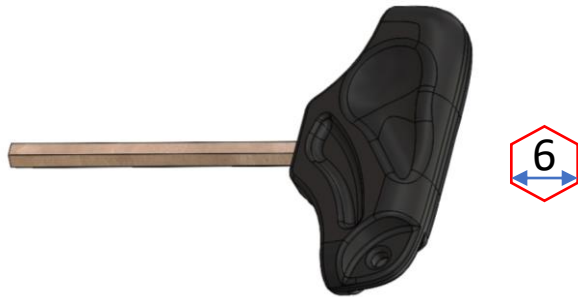

6




(x6)

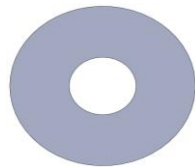

M8 (x6)



M8x50 (x2) for front
M8x60 (x2) for middle
M8x40 (x2) for rear

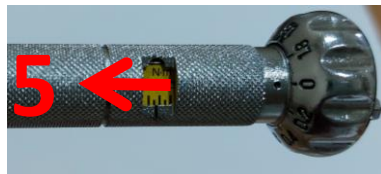




5



VW CADDY II SHORT 2010 → SKYPORT ROOF RAIL



instructions

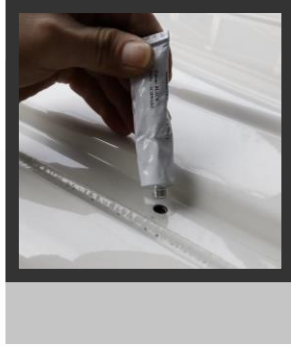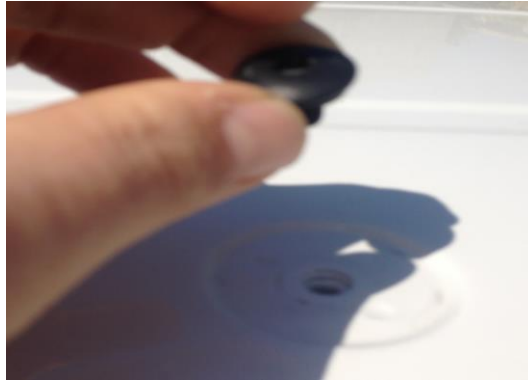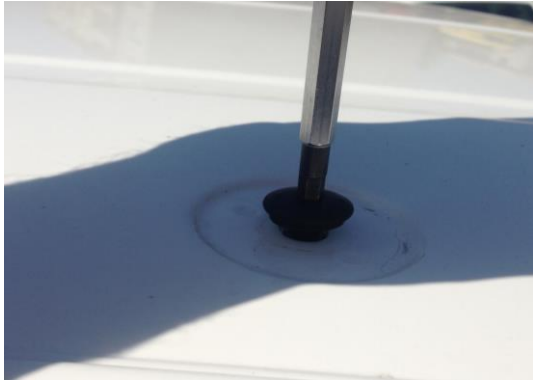

**Cıvataları
sıkmadan önce
silikon sıkın.**

**Put the cilicon
before tighten
up to the
screws.**

